

FIG. 1

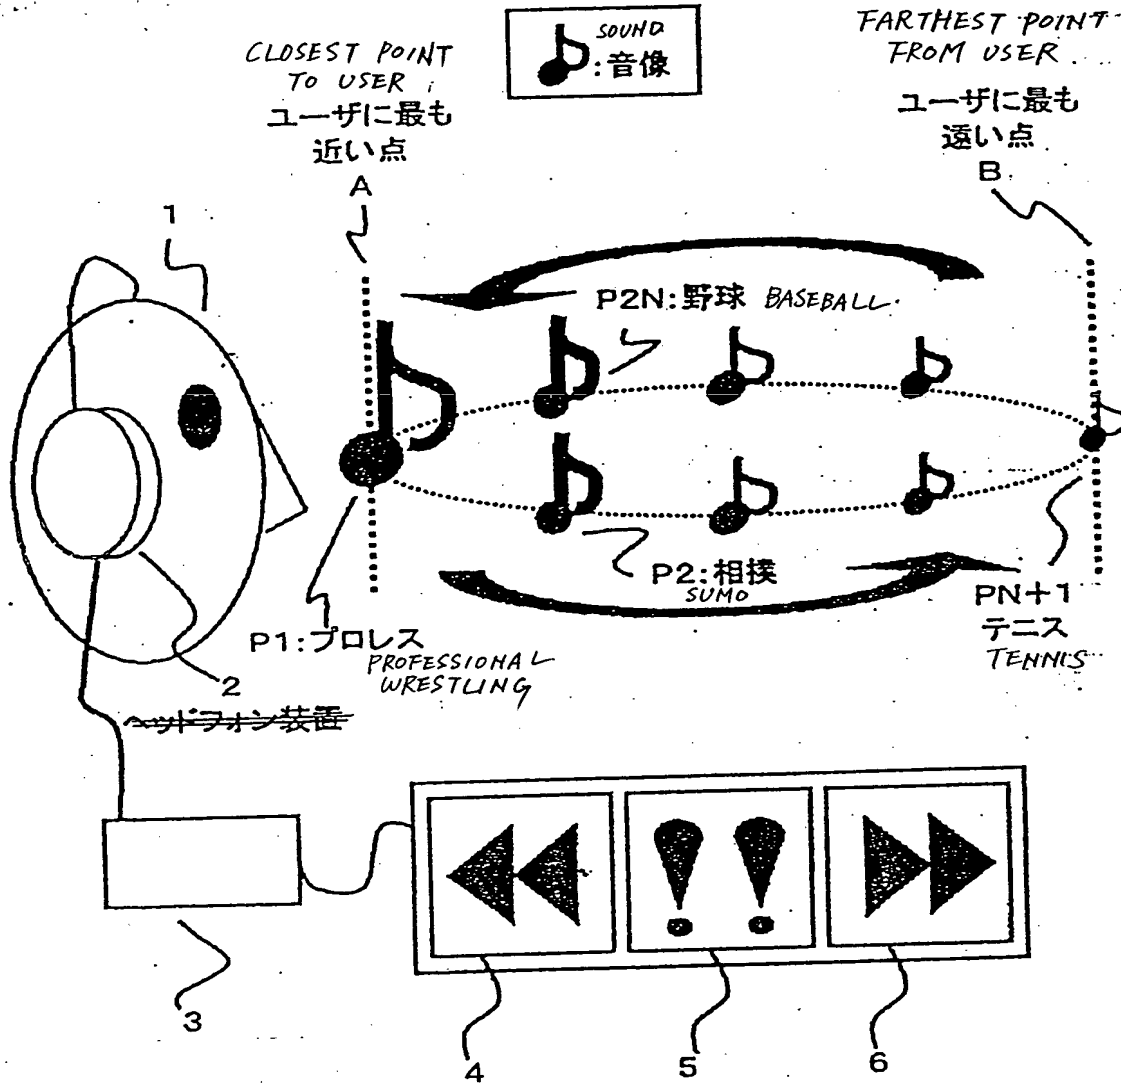 


FIG. 2

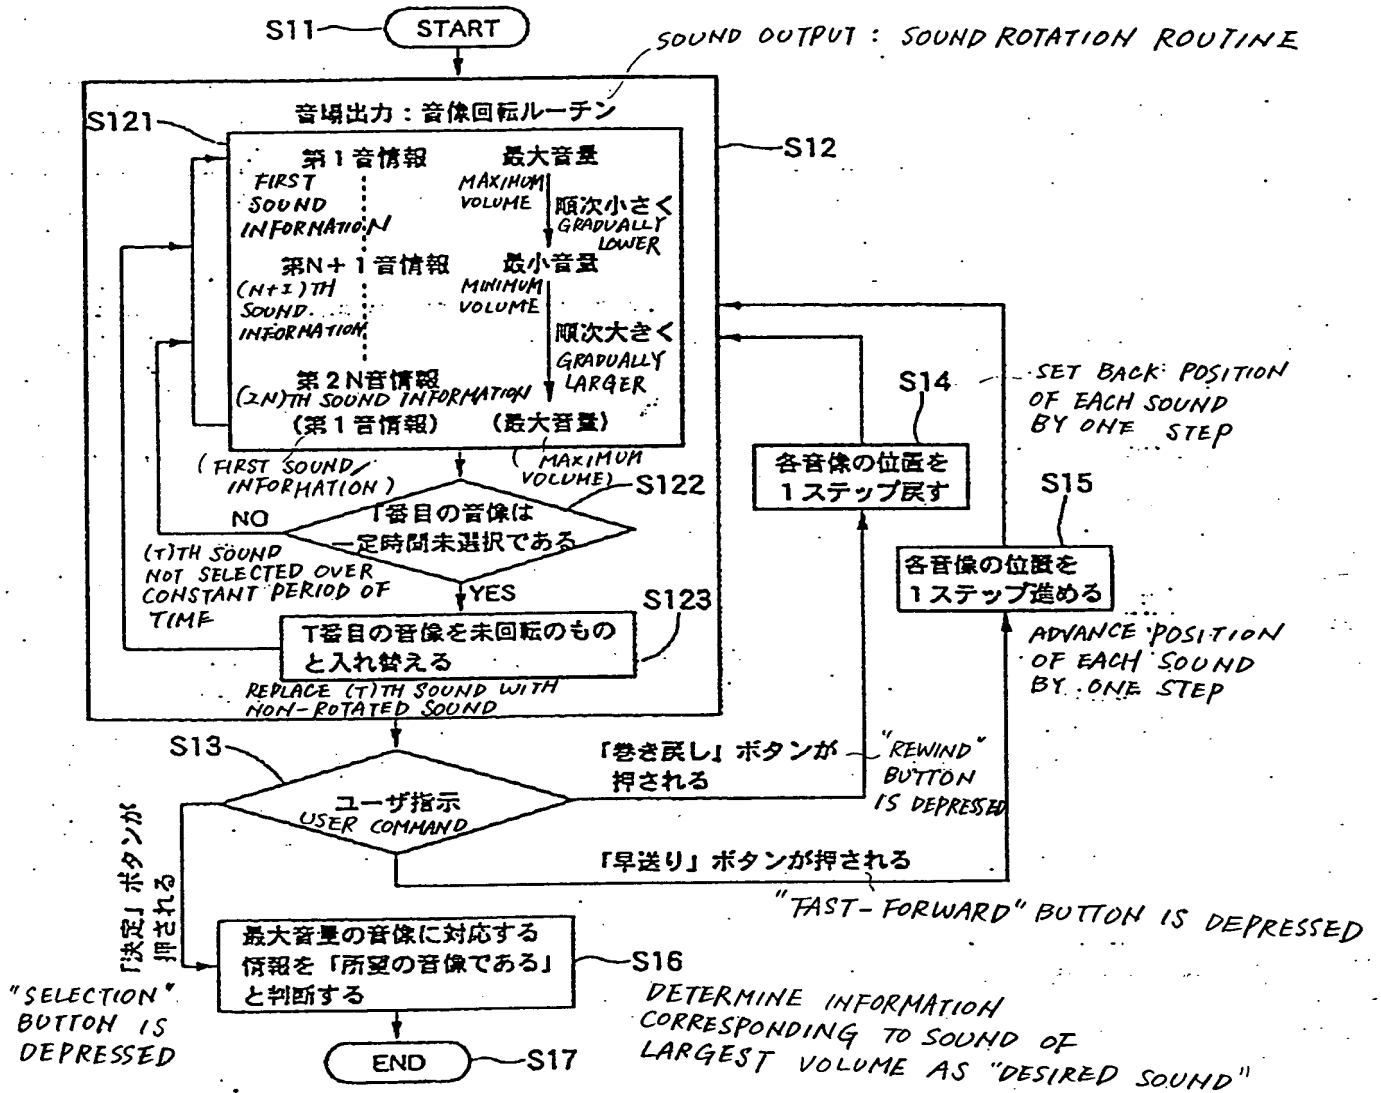 


FIG. 3

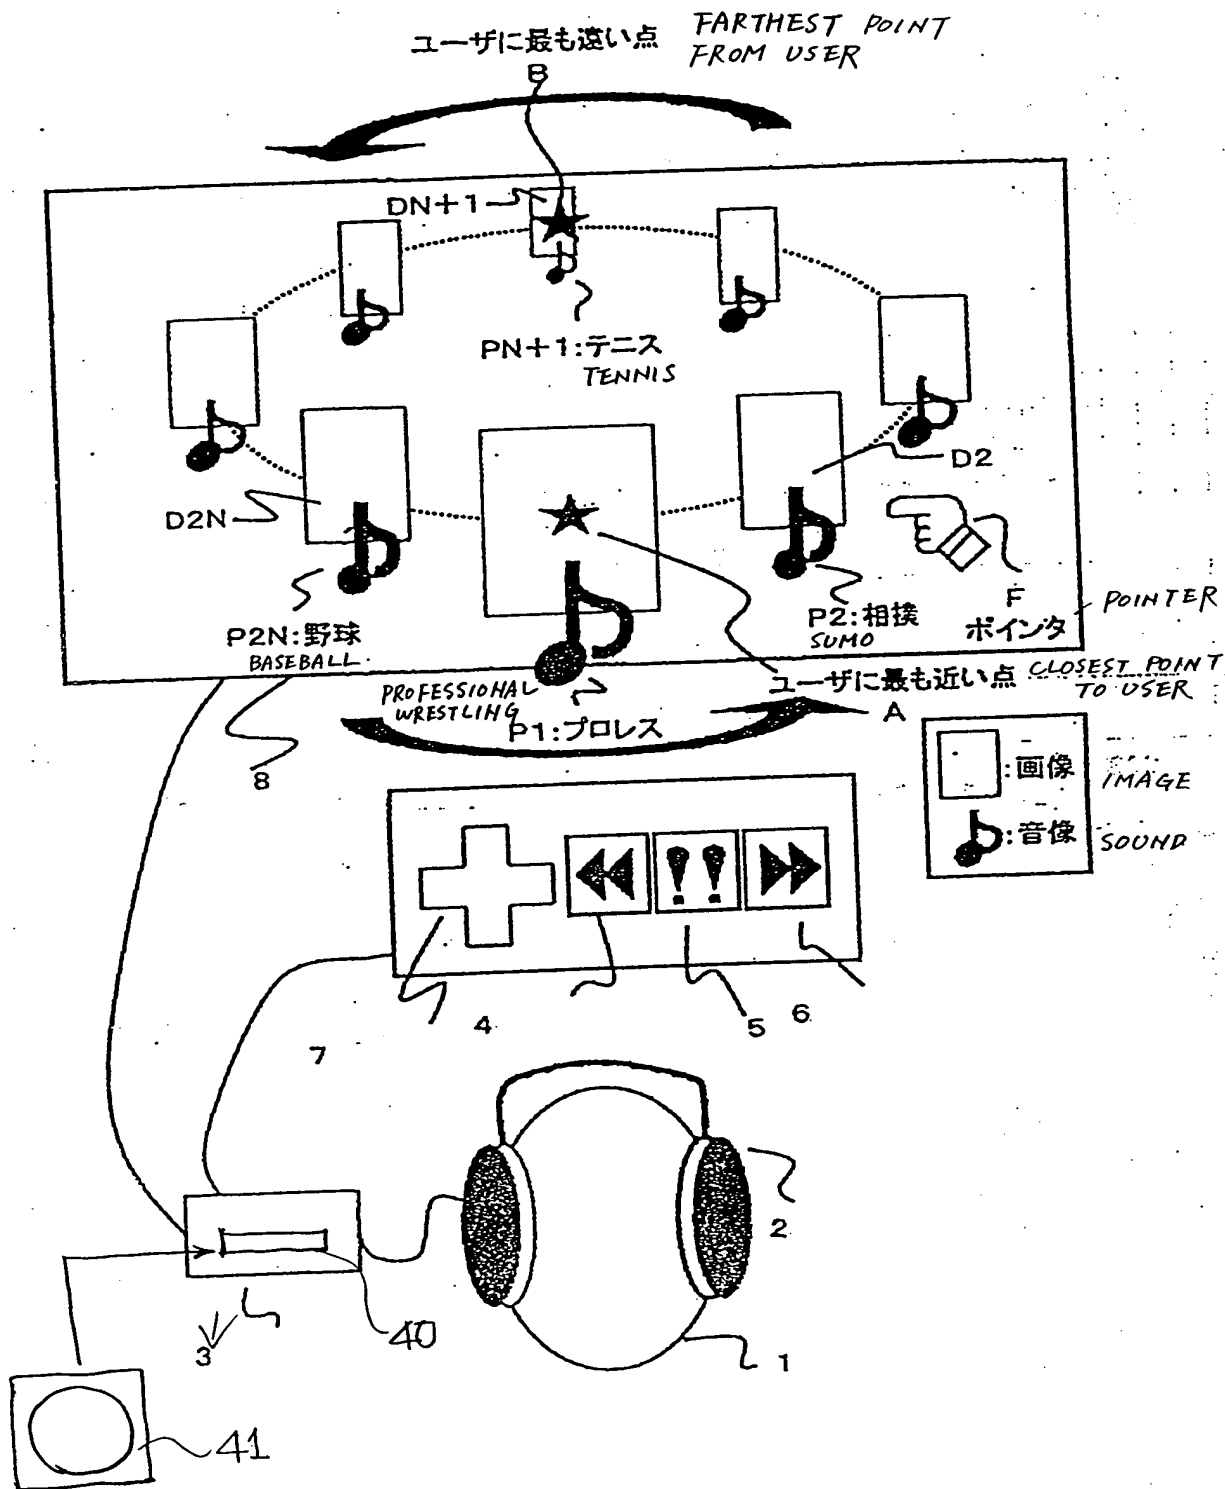 


FIG. 4

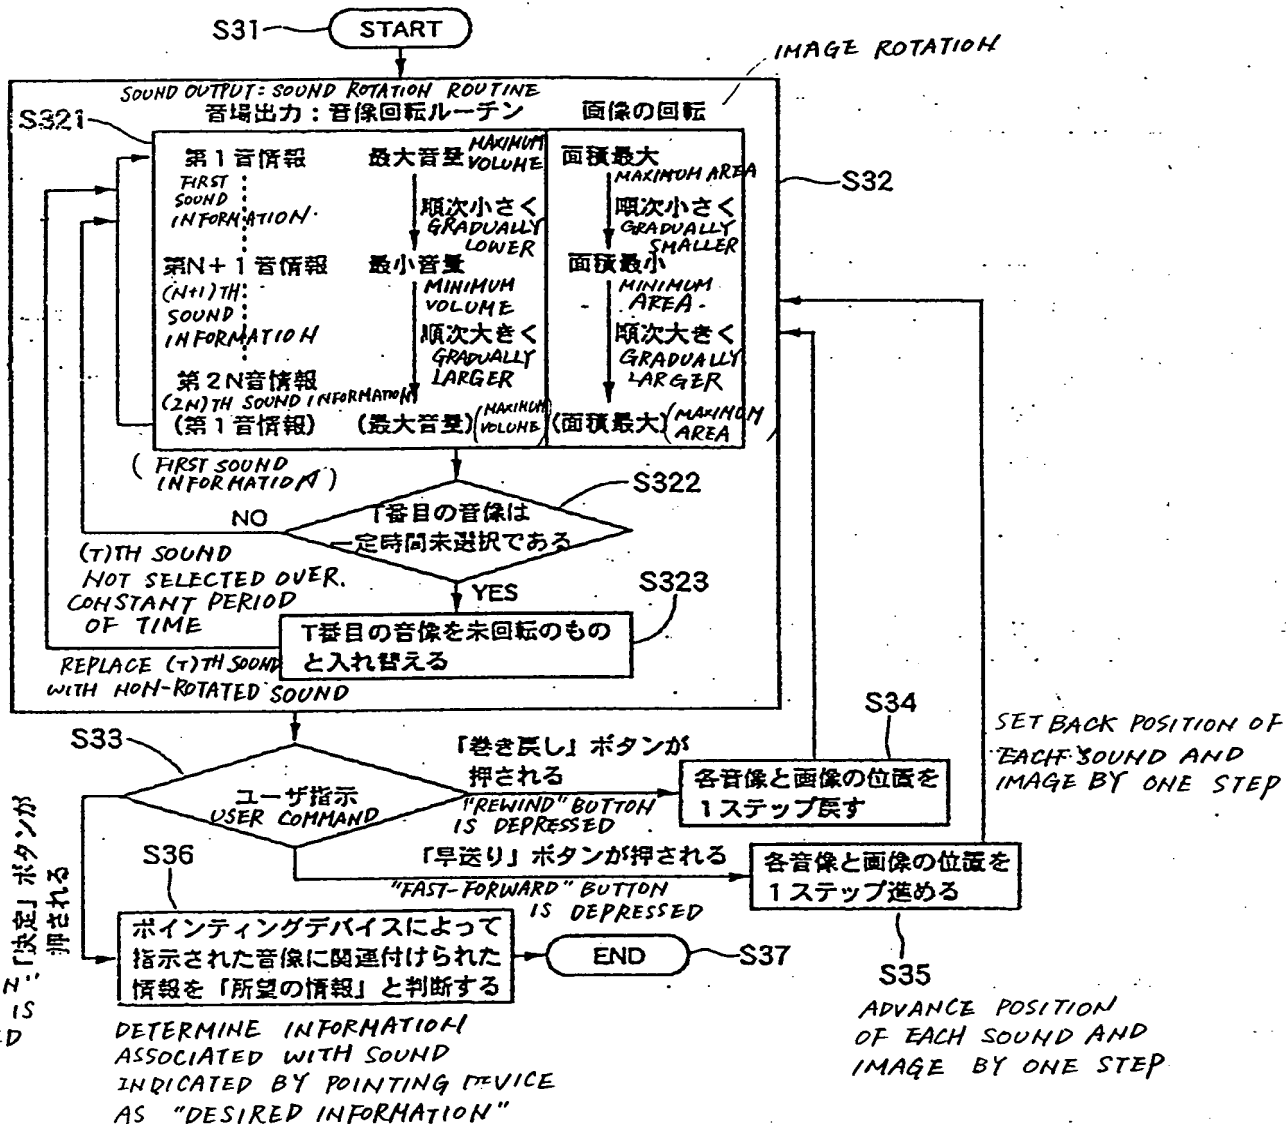 


FIG. 5A

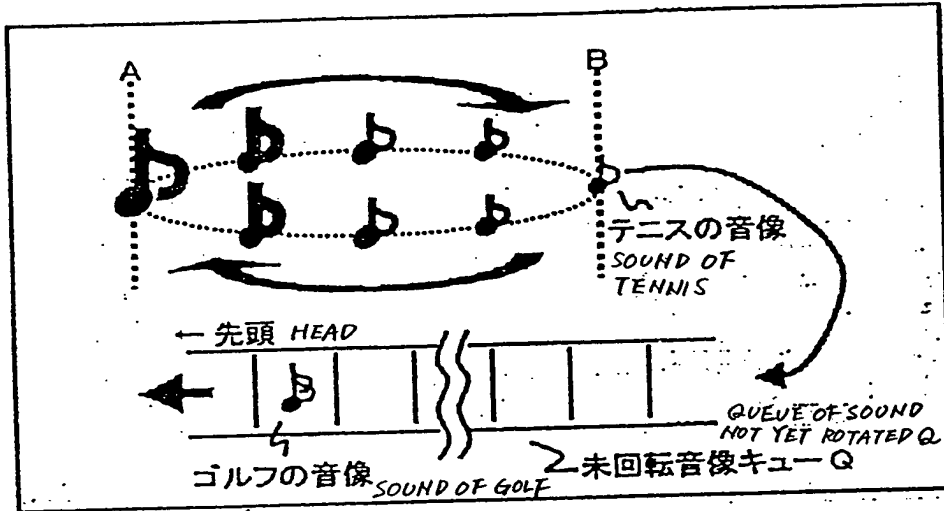 


FIG. 5B

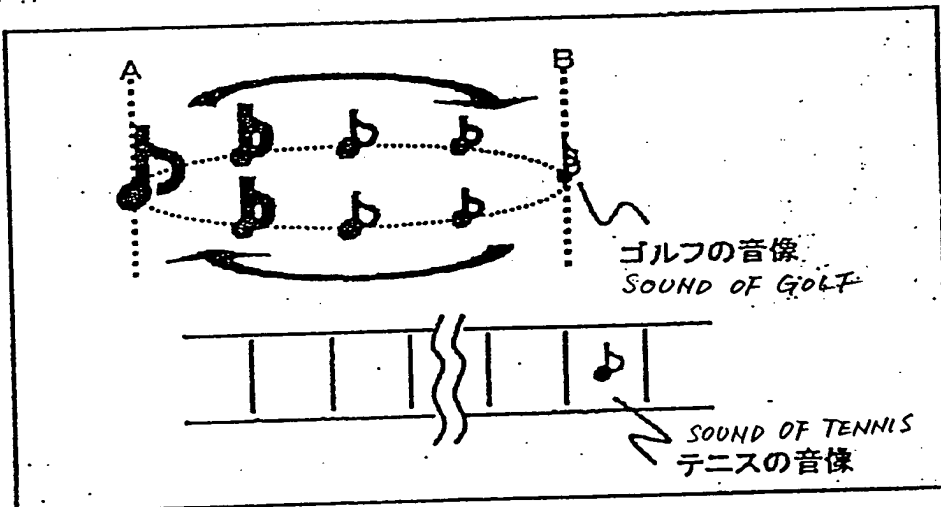 


FIG. 5C

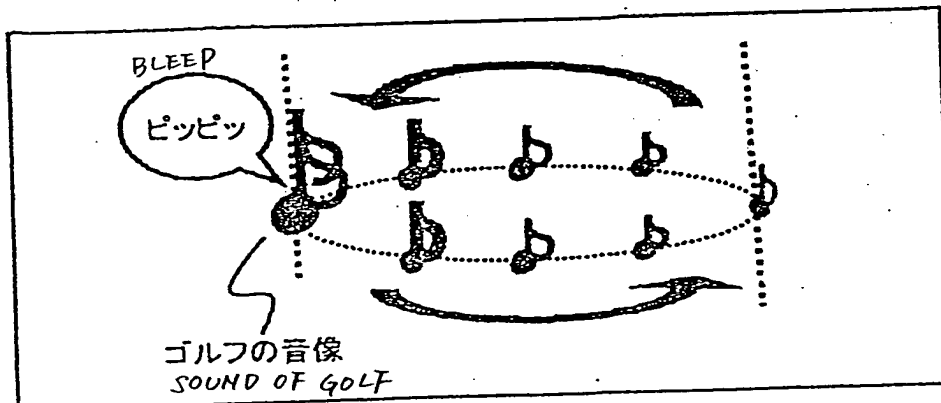 


FIG. 6A

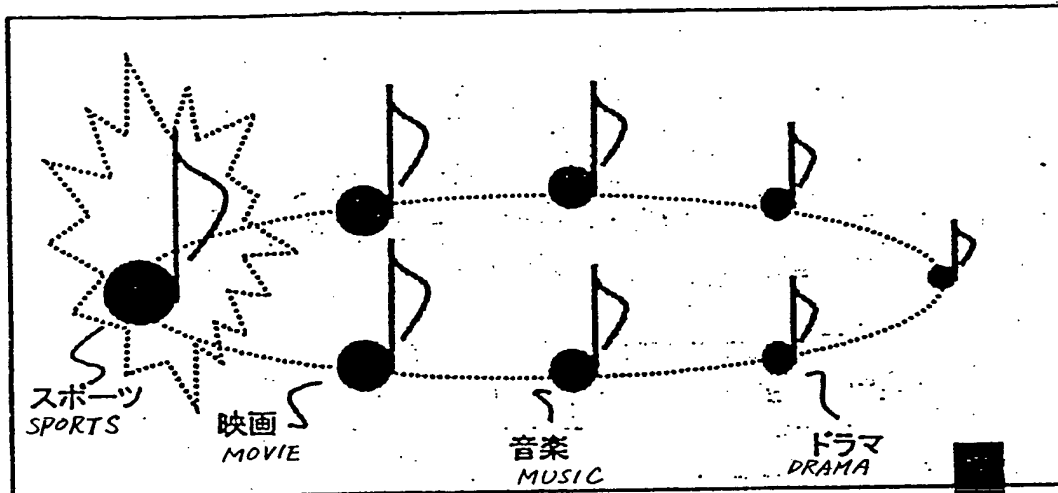 


FIG. 6B

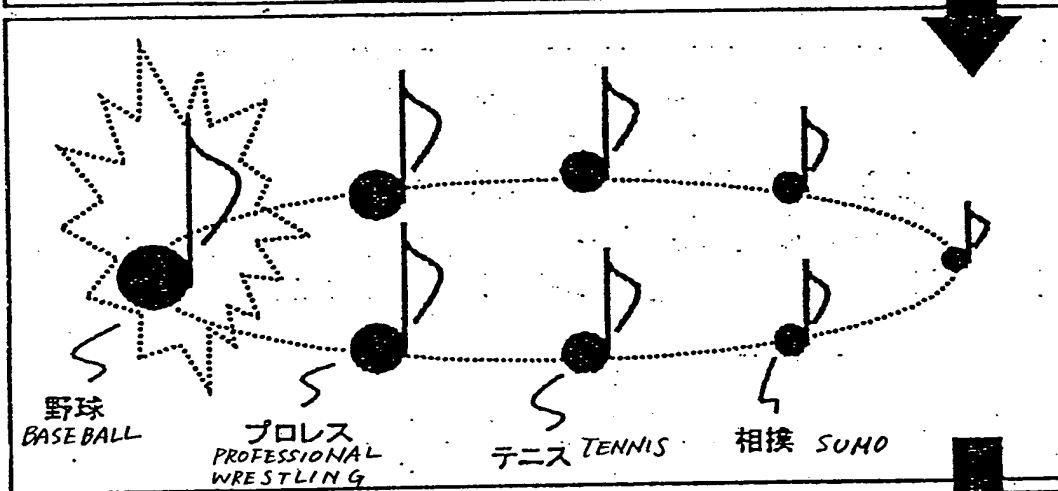 


FIG. 6C

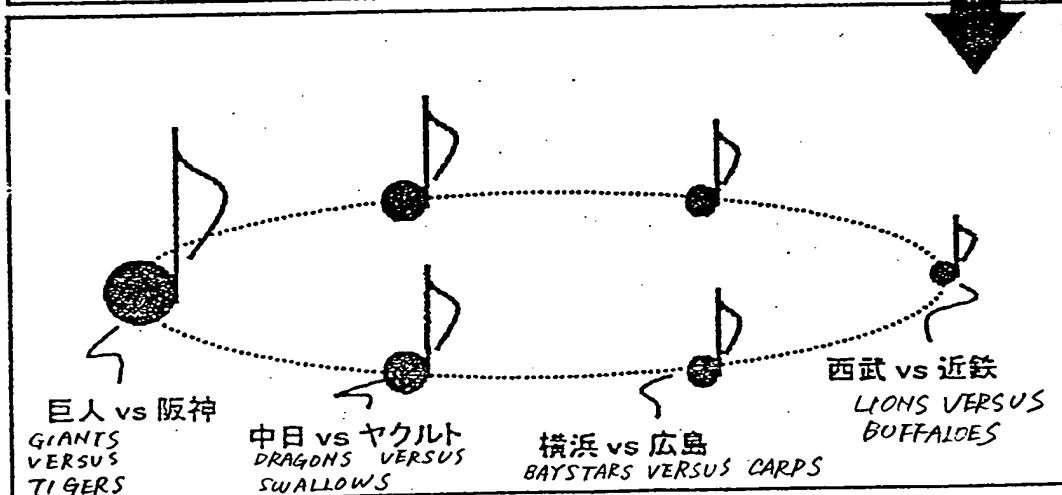 


FIG. 7

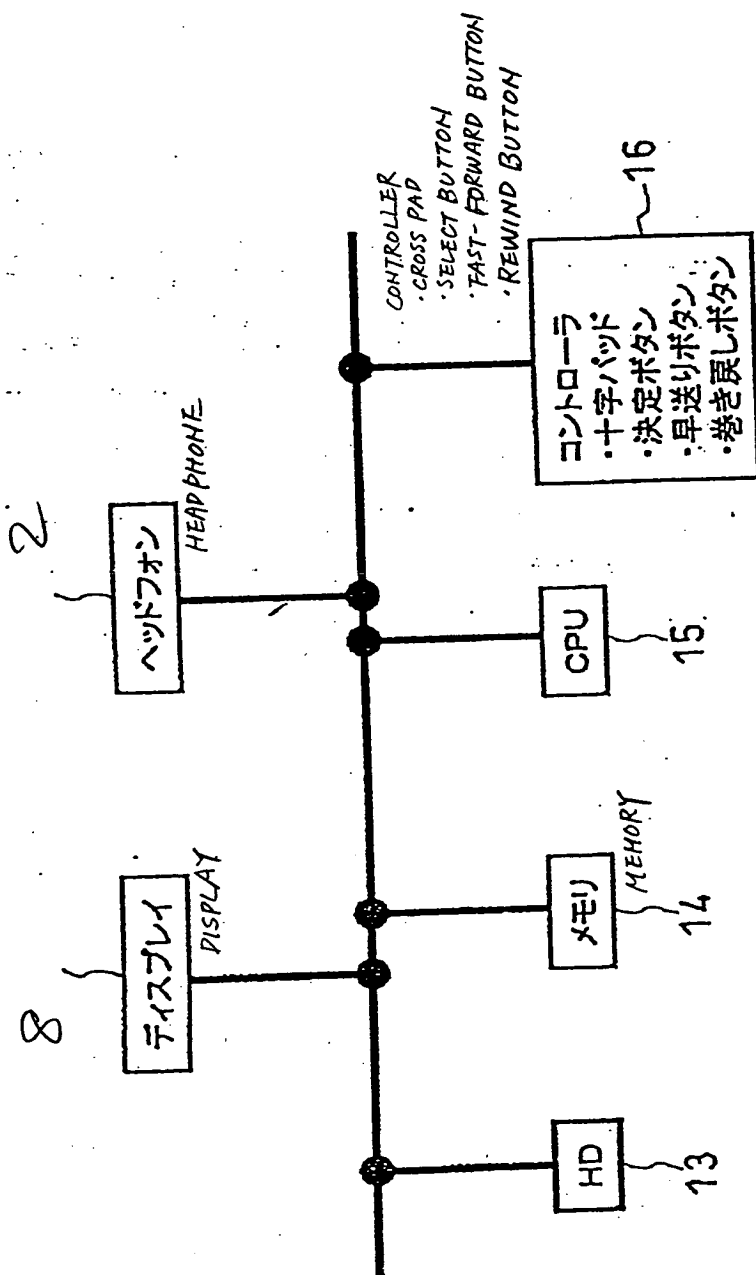 


FIG. 8



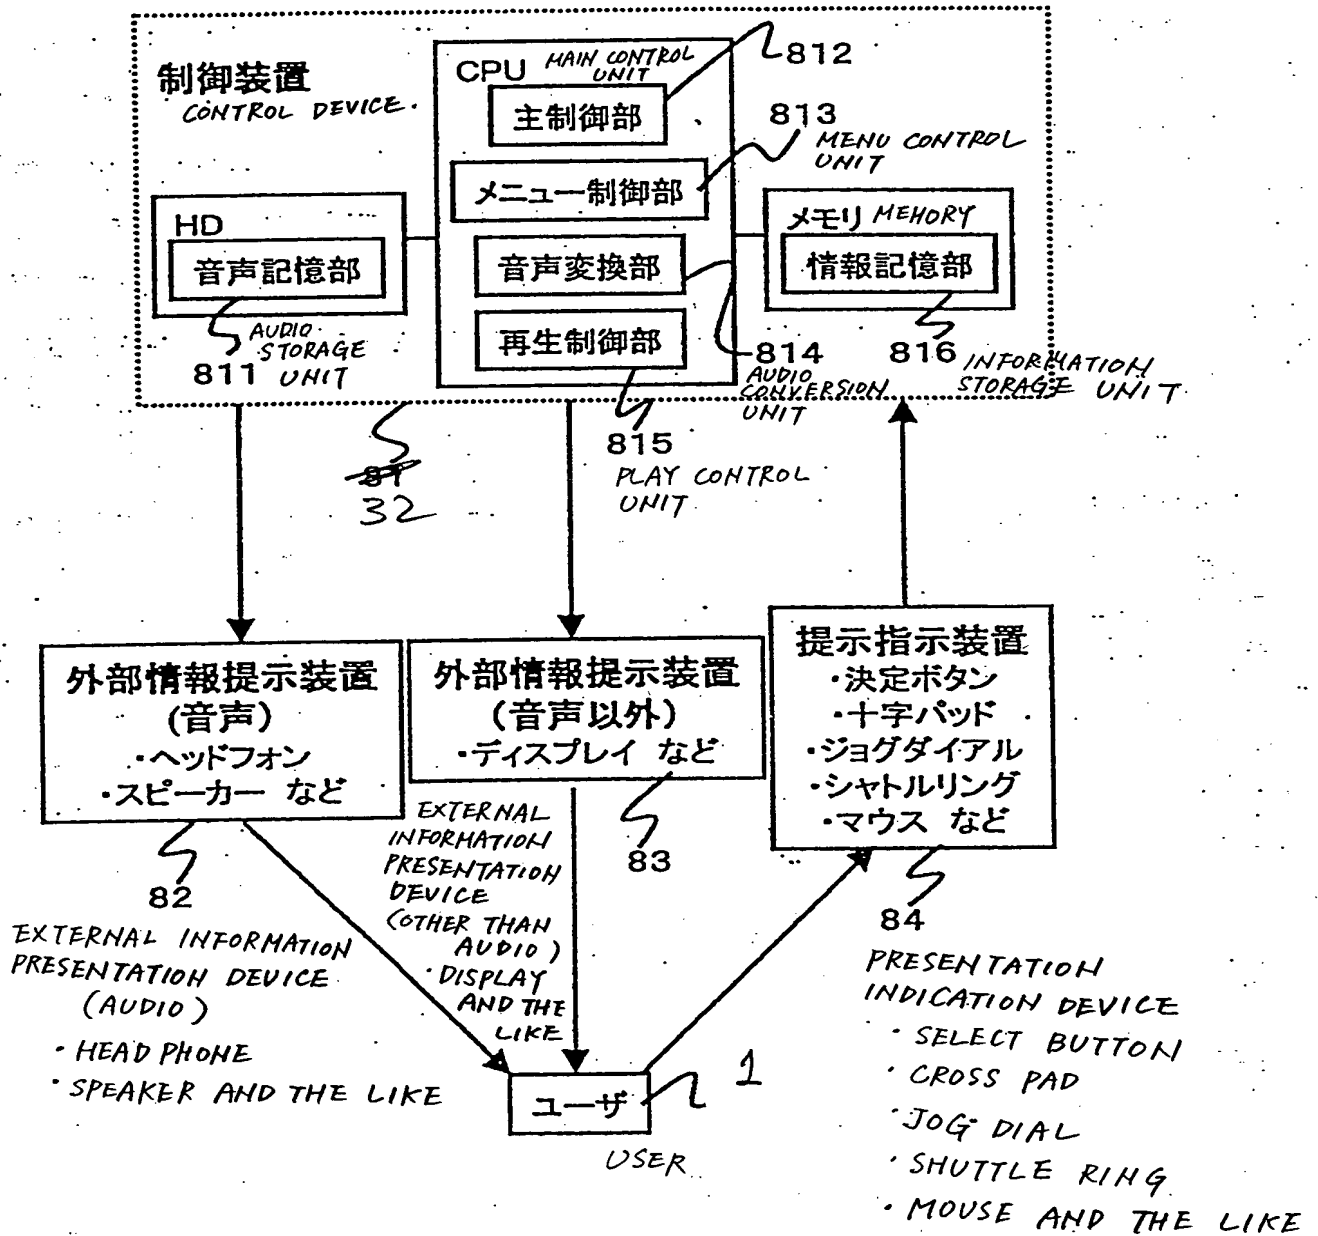 


FIG. 9


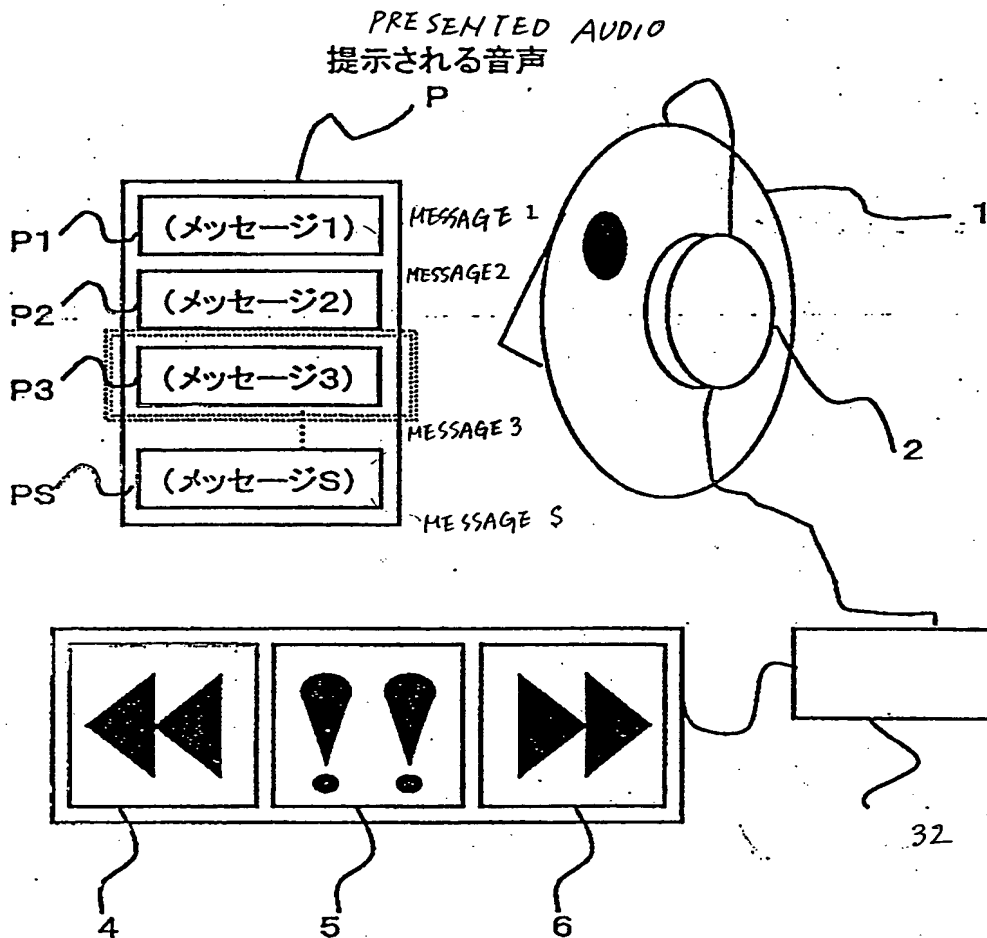 


005420-3ETH0560

 FIG. 10

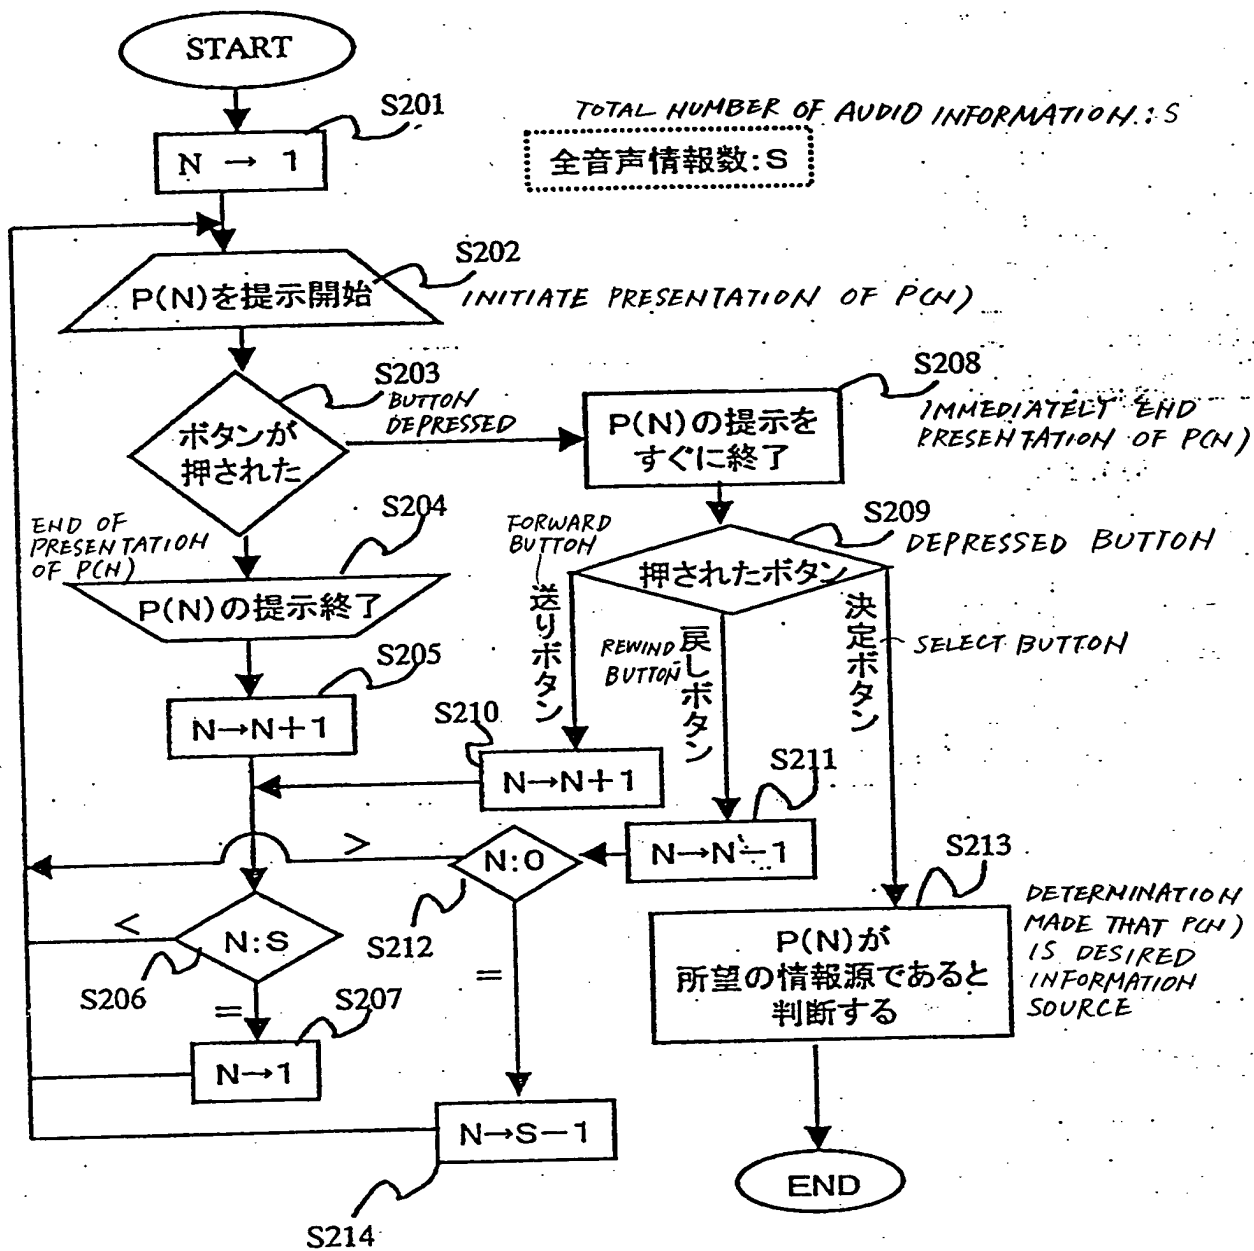

MAIL RECEIVED.
THERE ARE 0 NEW MAILS

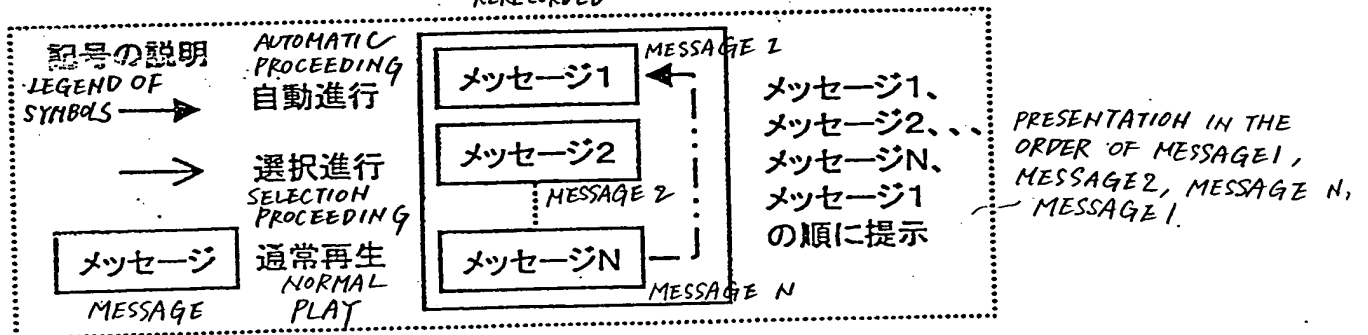  

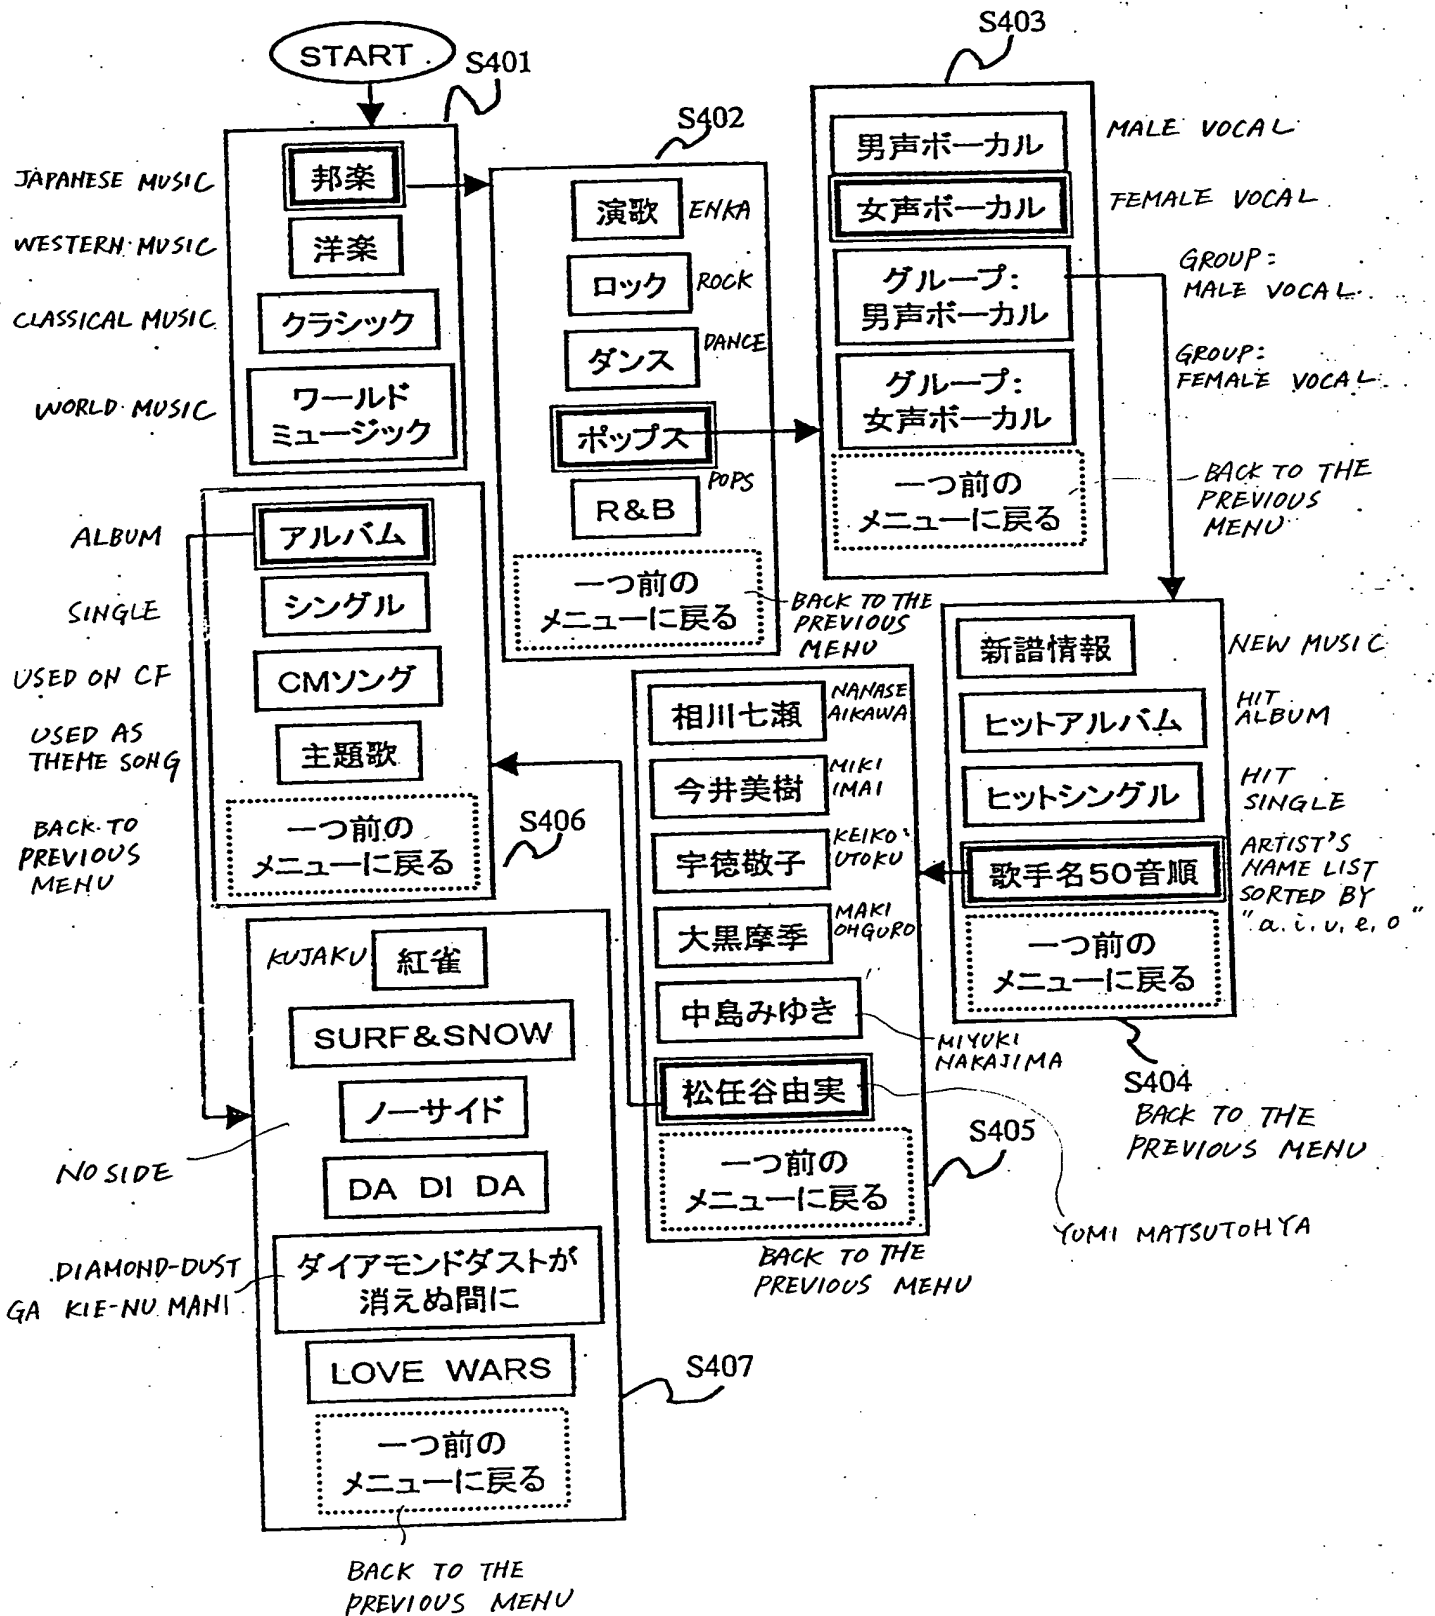 
[illegible]

FIG. 13

81


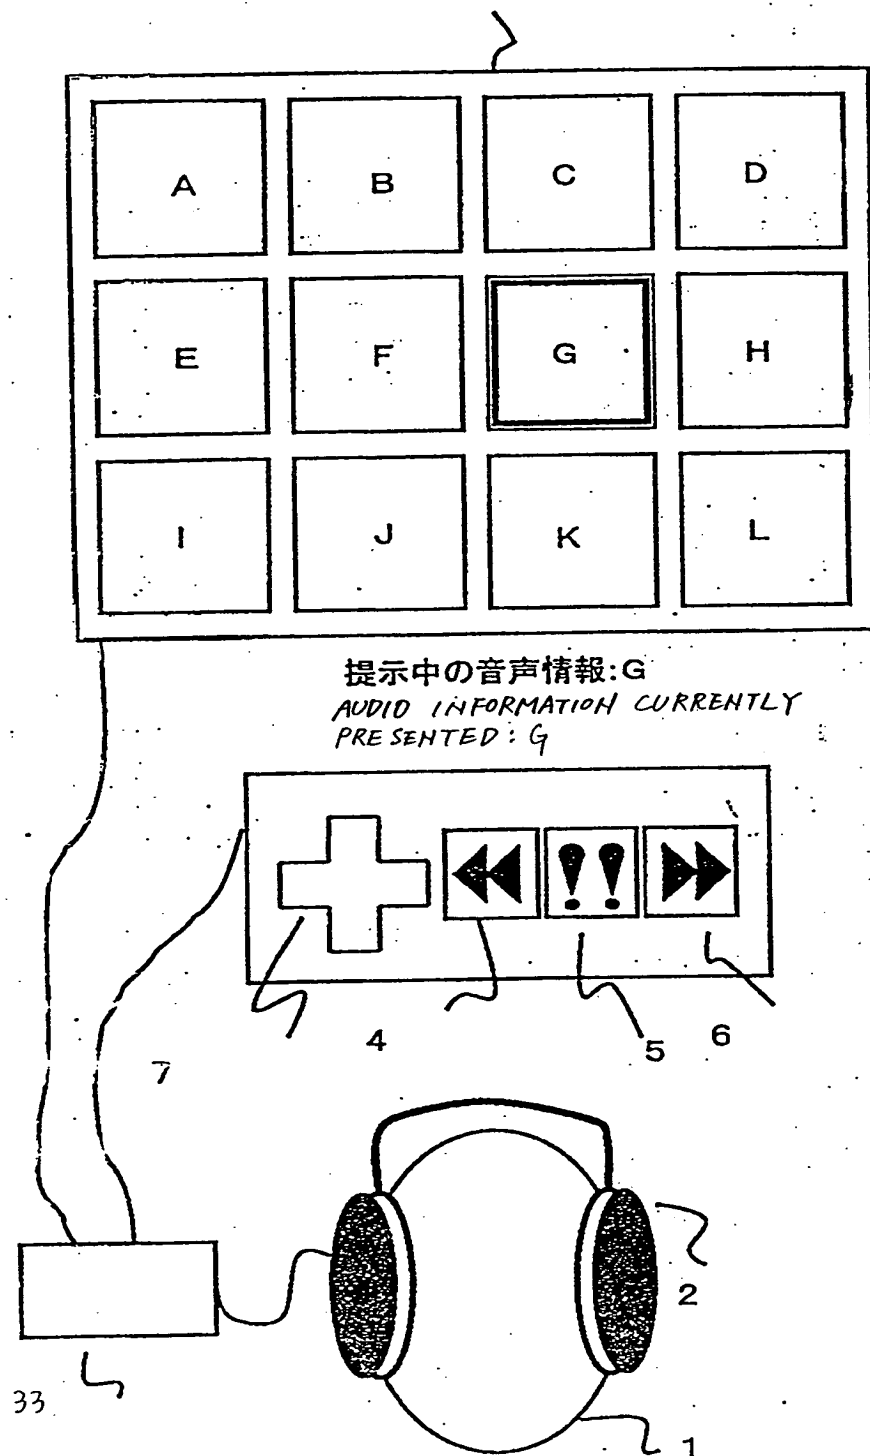 


FIG. 14

 81

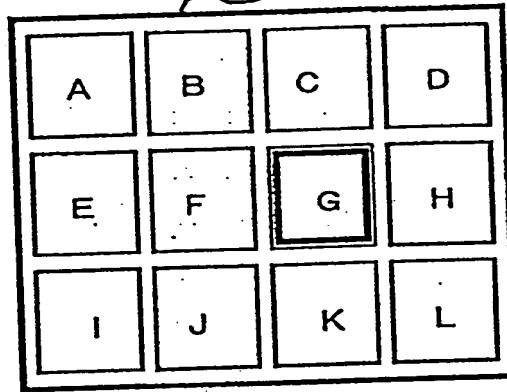


S61

提示中の音声情報: G AUDIO INFORMATION CURRENTLY PRESENTED: G

AUTOMATIC ADVANCING,
OR WHEN REWIND
BUTTON 6 OF
FIG. 9 IS
DEPRESSED

自動的に進行
9 または、
図 9 の送りボタン6を
押したとき

 図 13 の十字パッド7の
下方向キーを
押したとき WHEN DOWNWARD
KEY IN CROSS PAD 7
OF FIG. 13. IS DEPRESSED

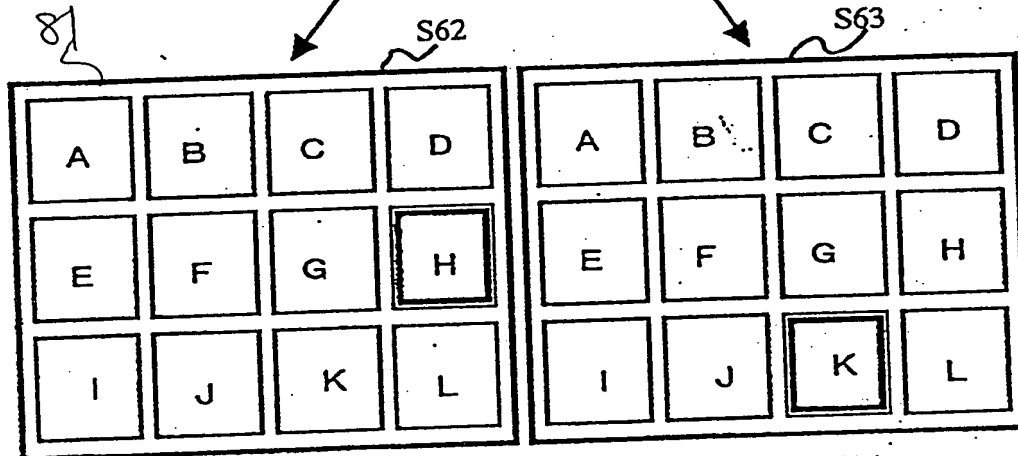

S62

S63

提示中の音声情報: H
AUDIO INFORMATION
CURRENTLY PRESENTED: H

提示中の音声情報: K
AUDIO INFORMATION
CURRENTLY PRESENTED: K

FIG. 15

200

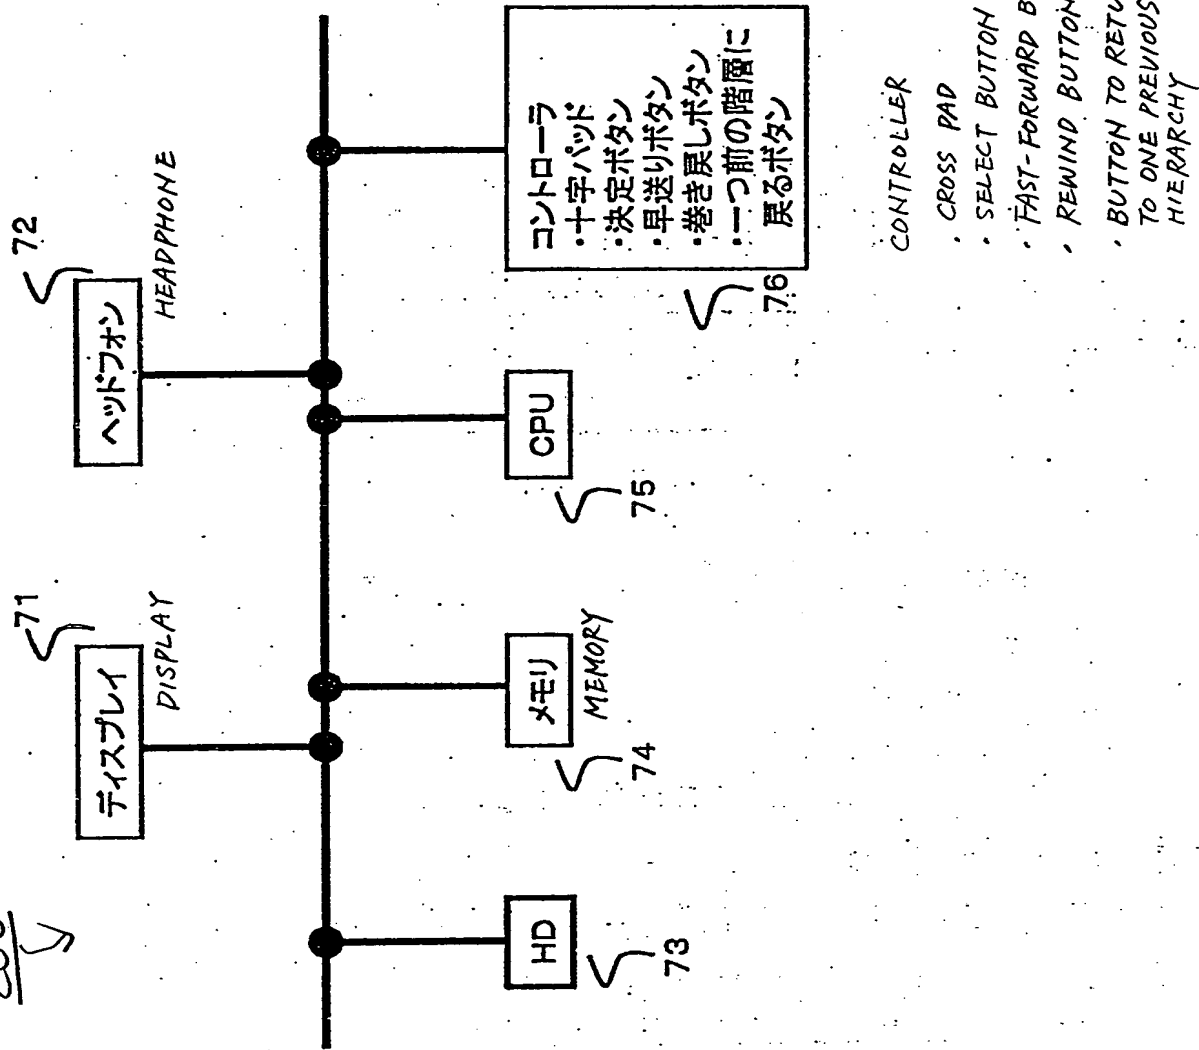 


FIG. 16

300

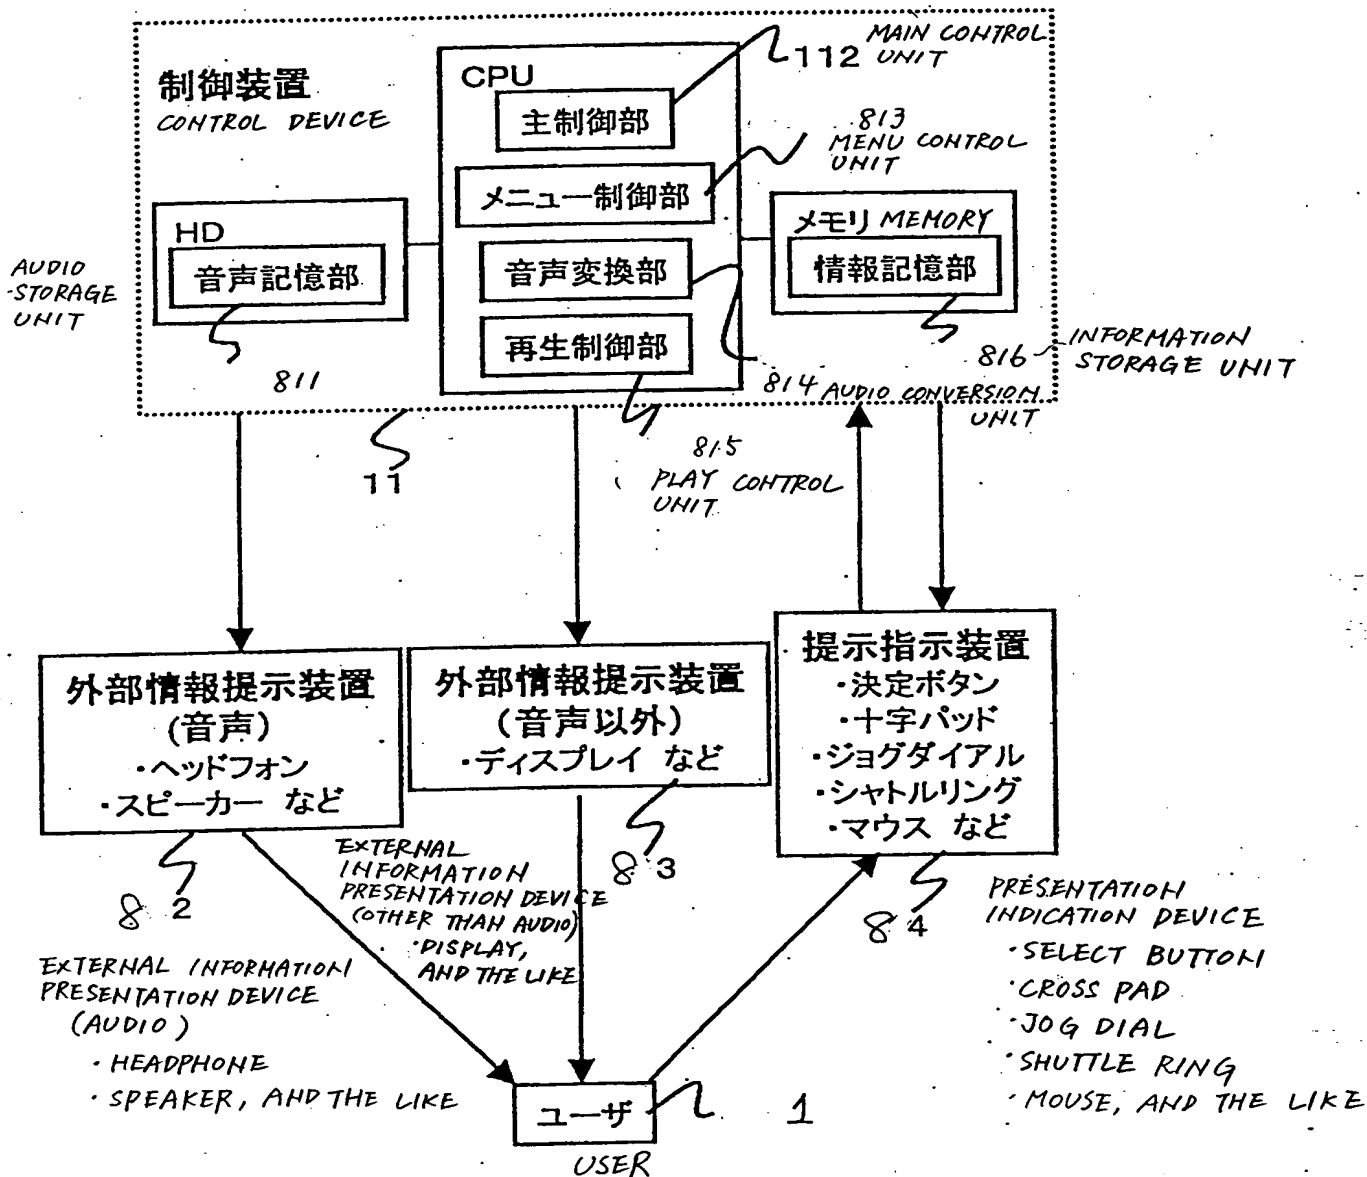 


FIG. 17


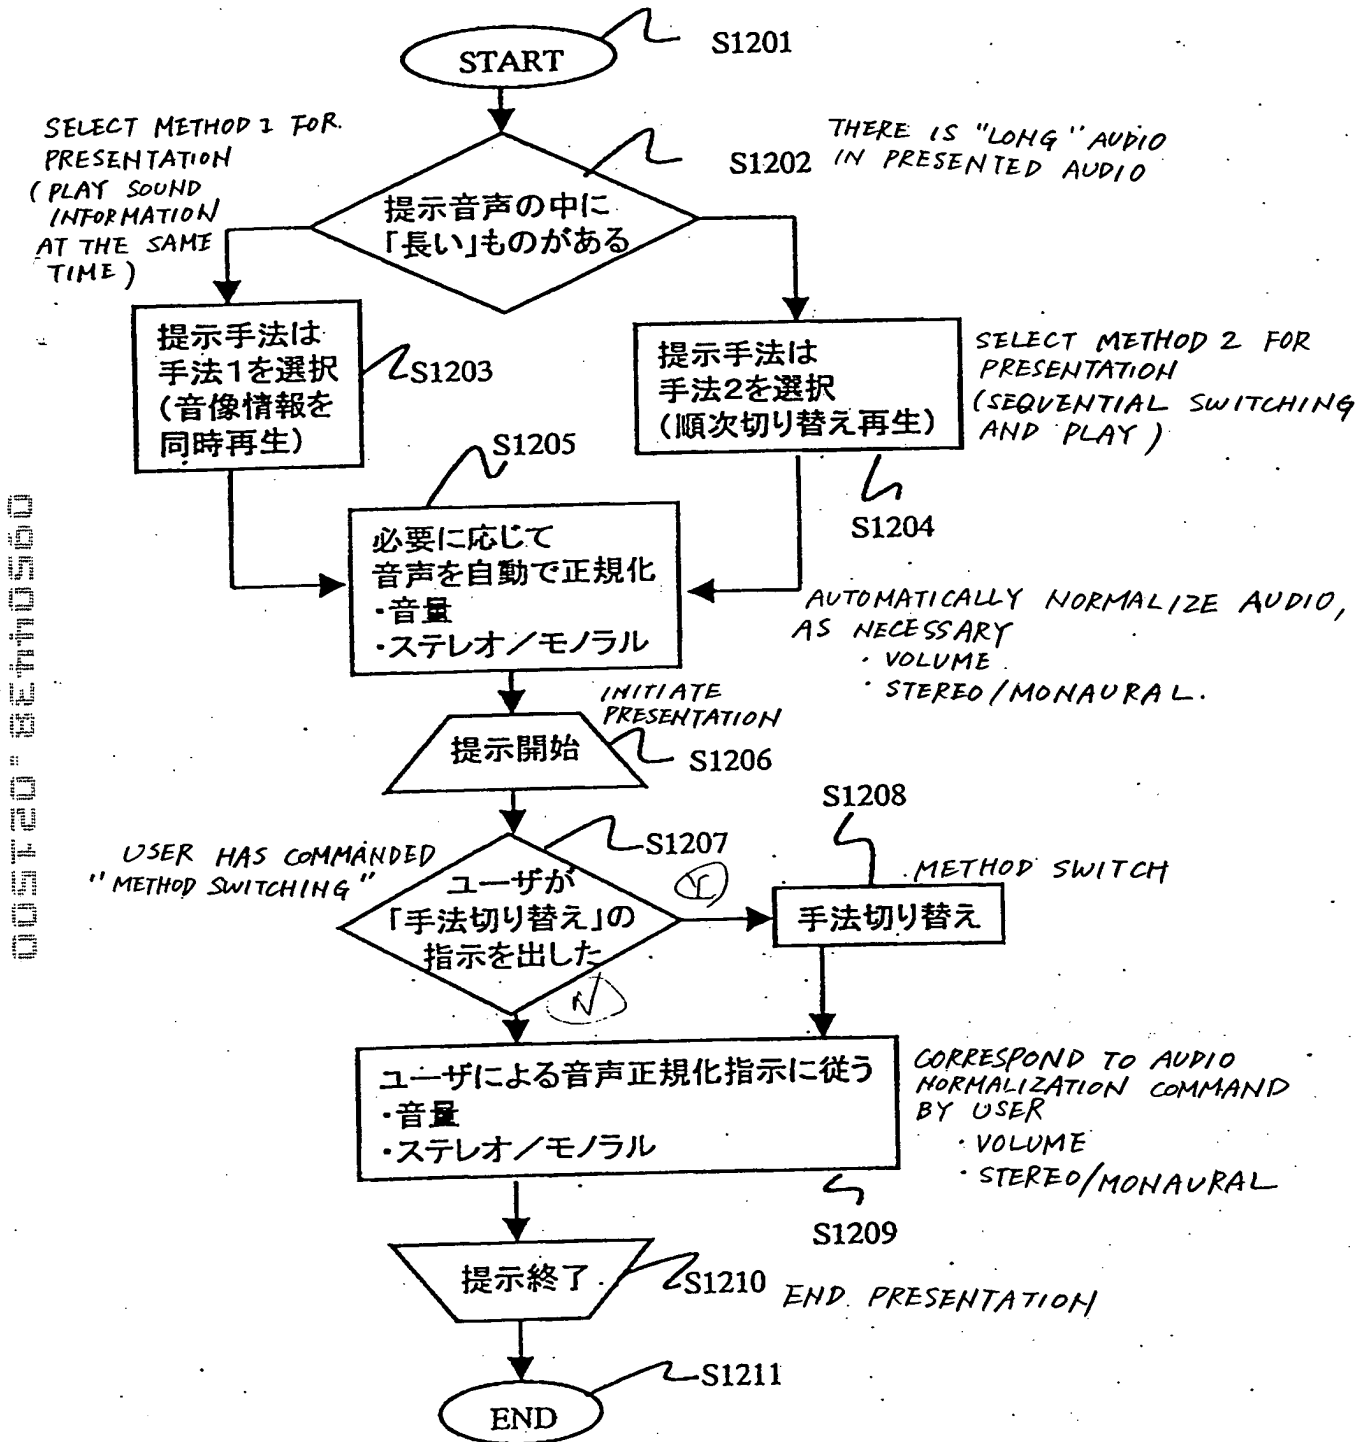 


FIG. 18

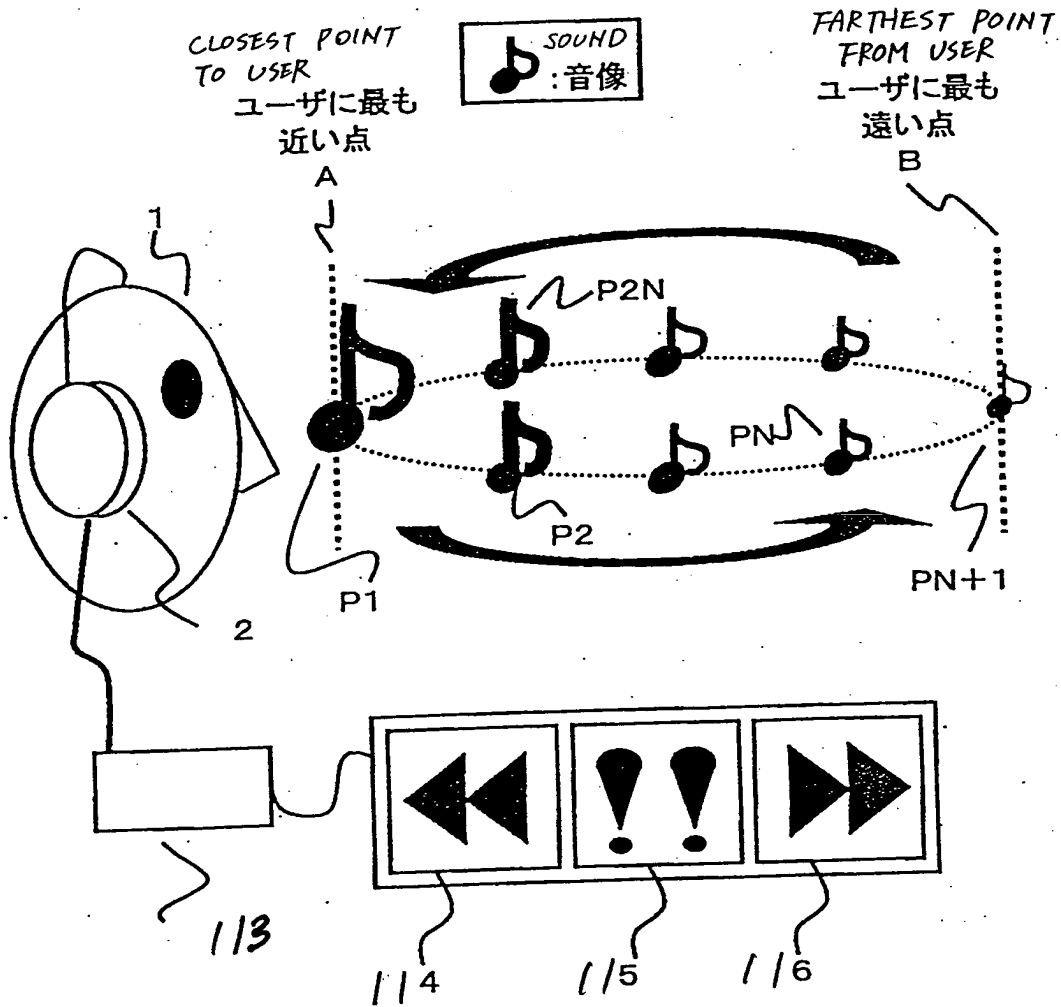 

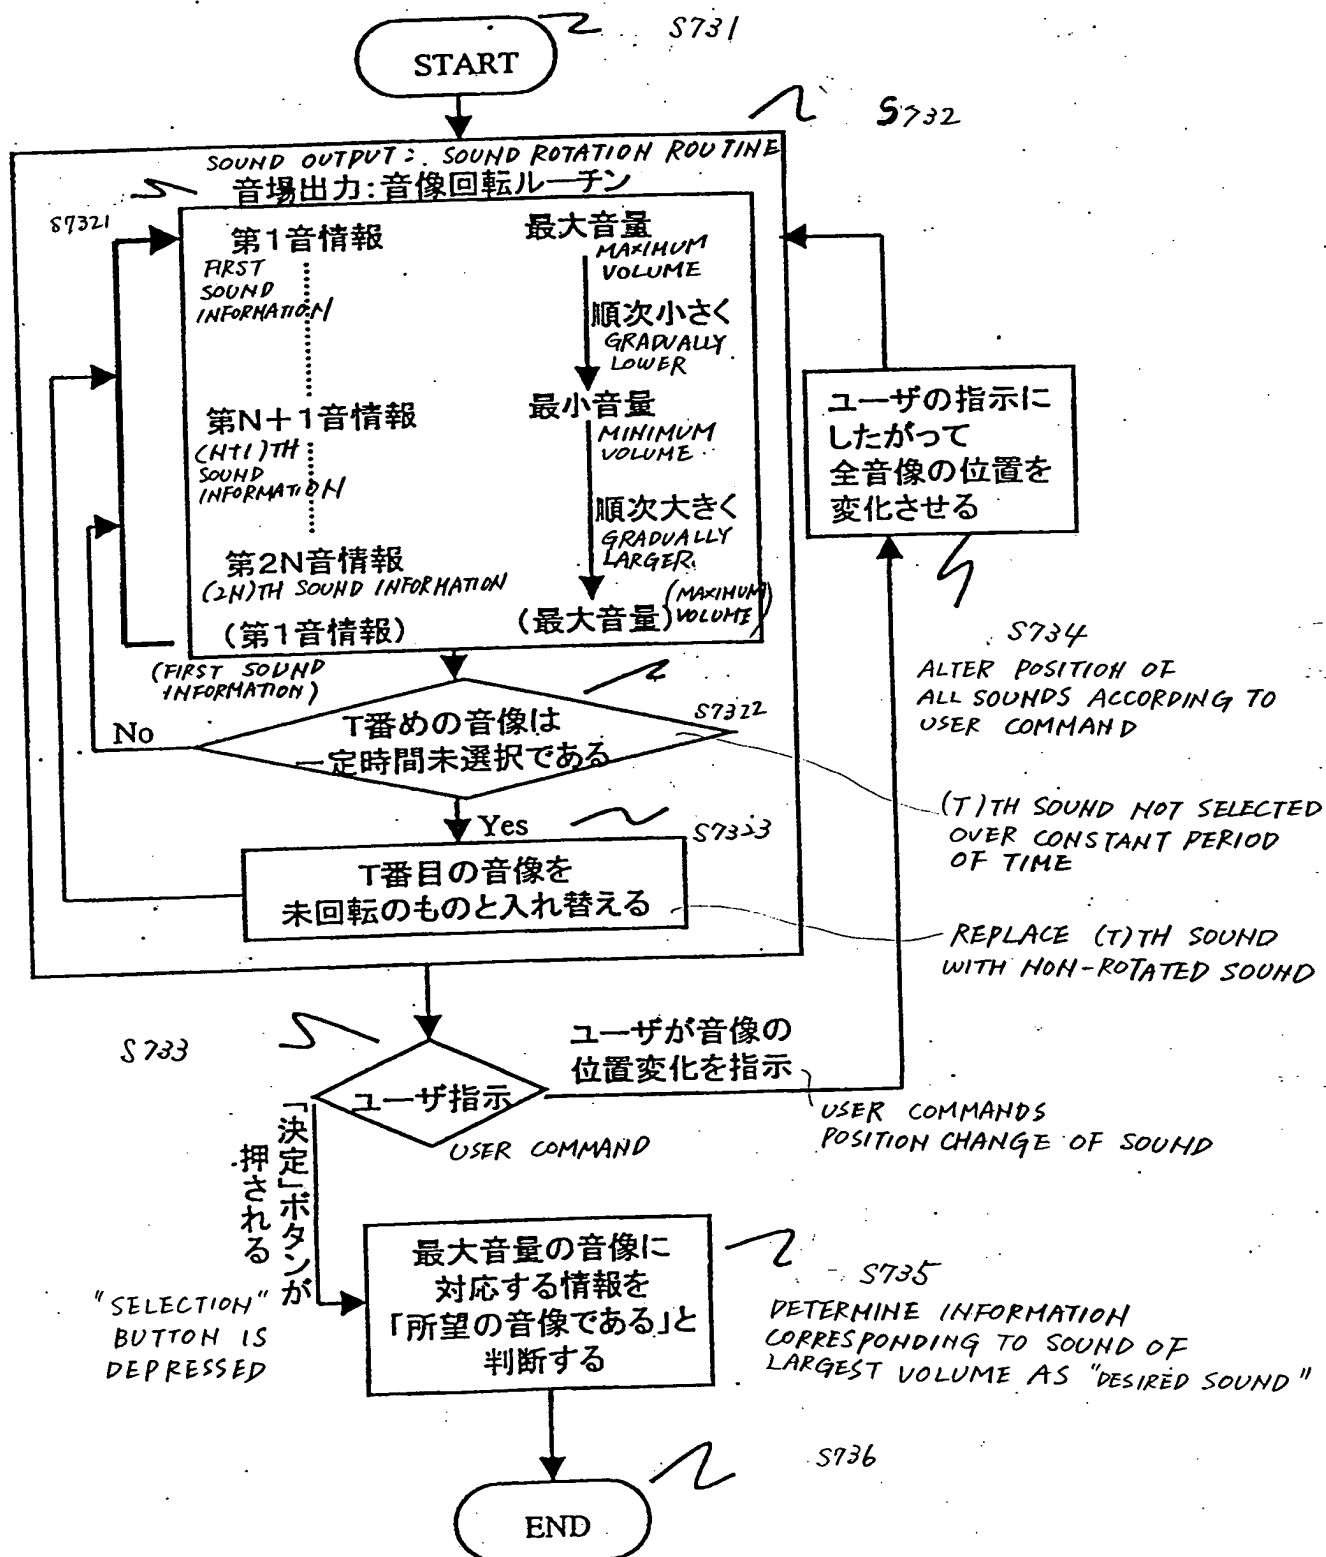 
[illegible]

FIG. 20

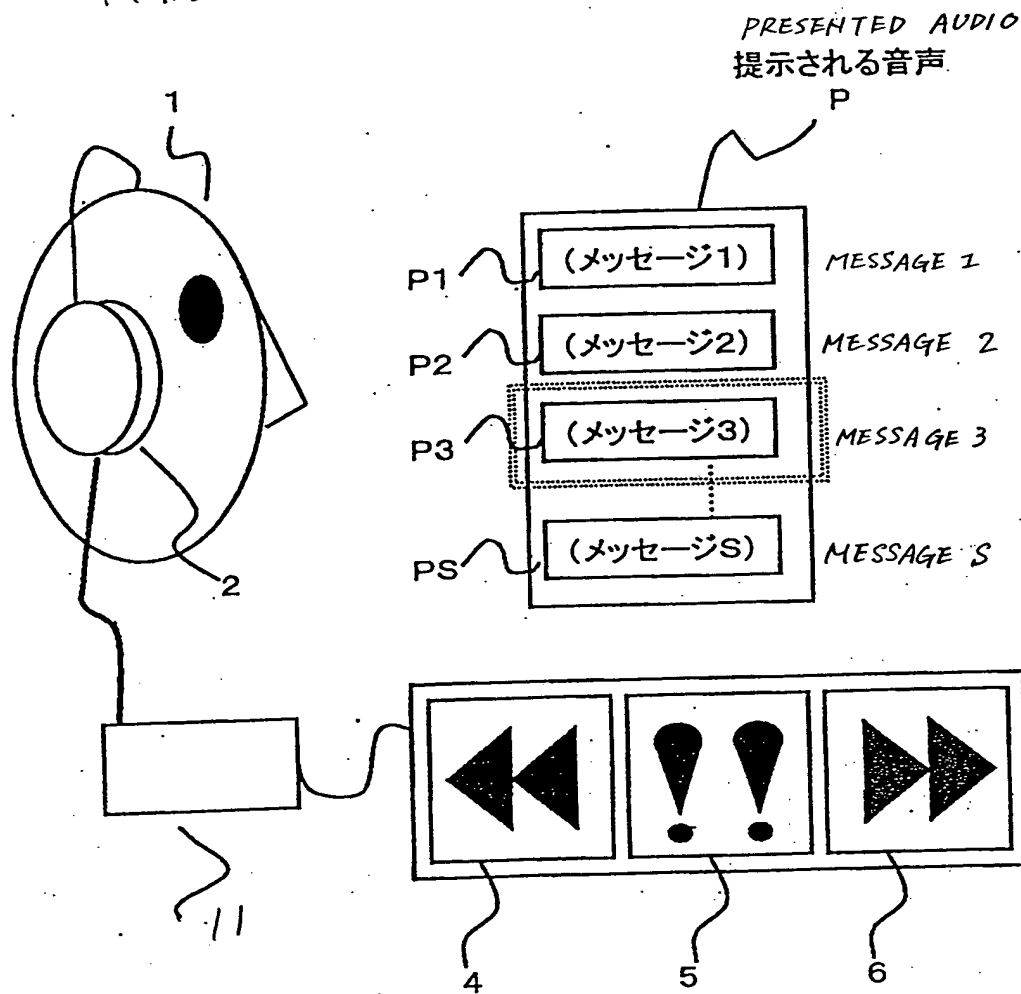 


FIG. 21

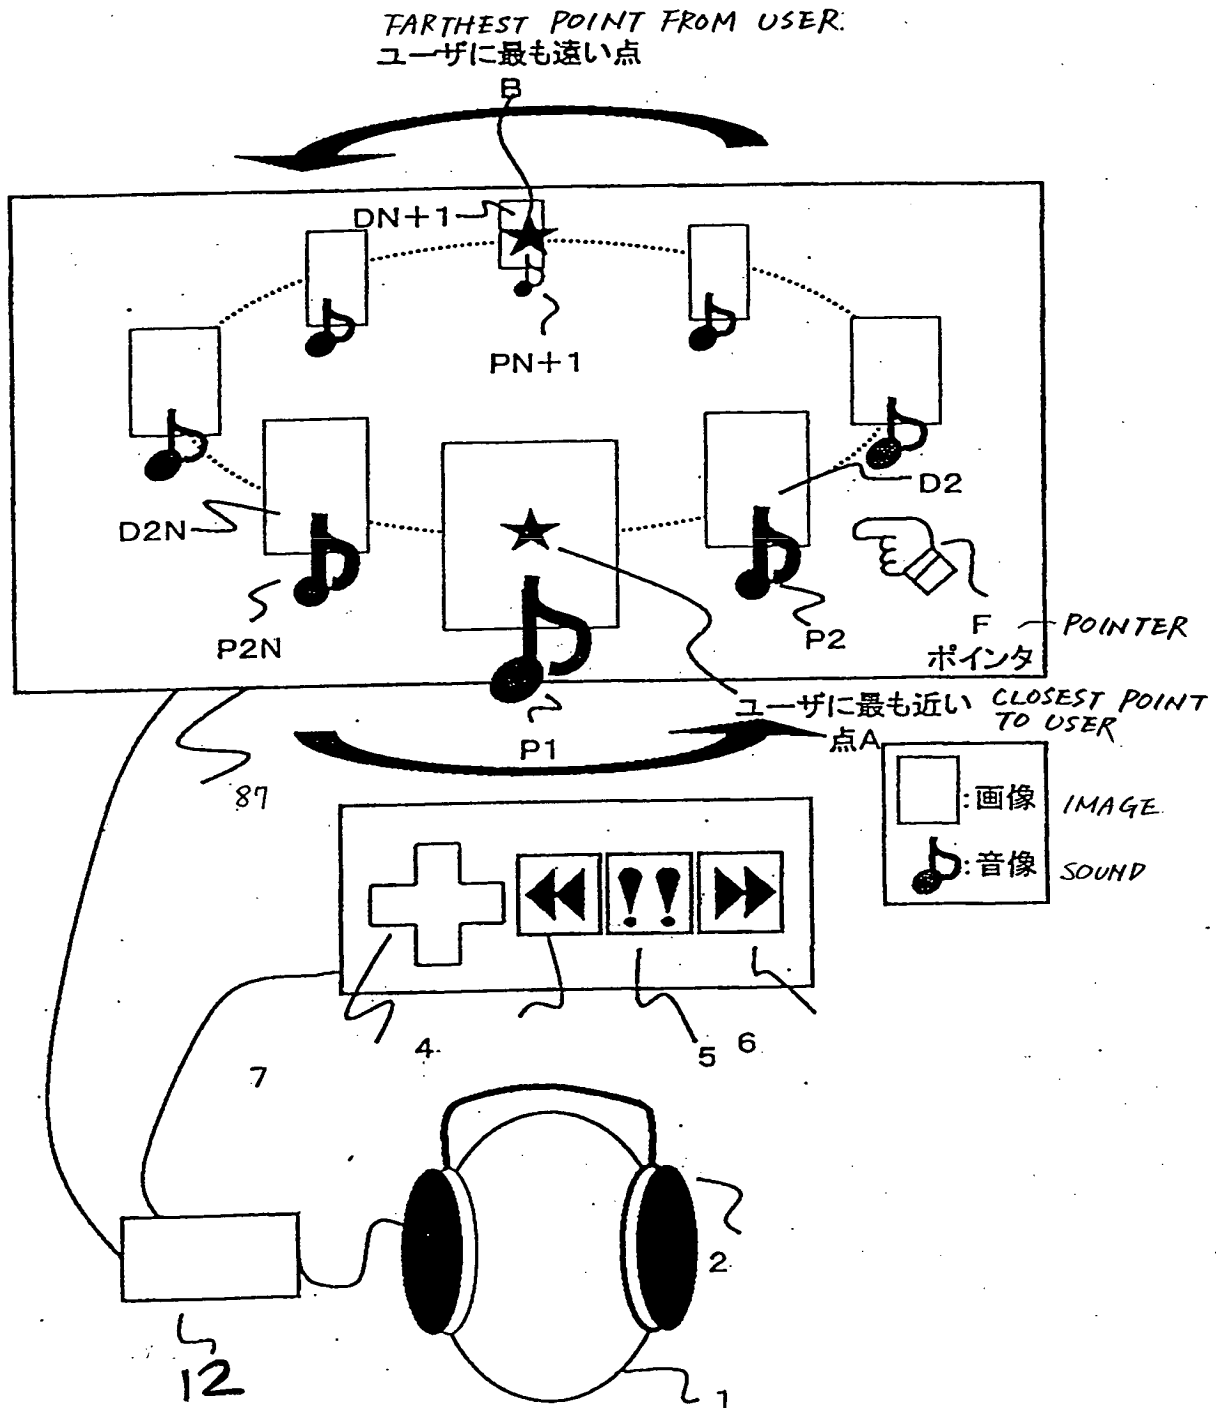 


FIG. 22

87


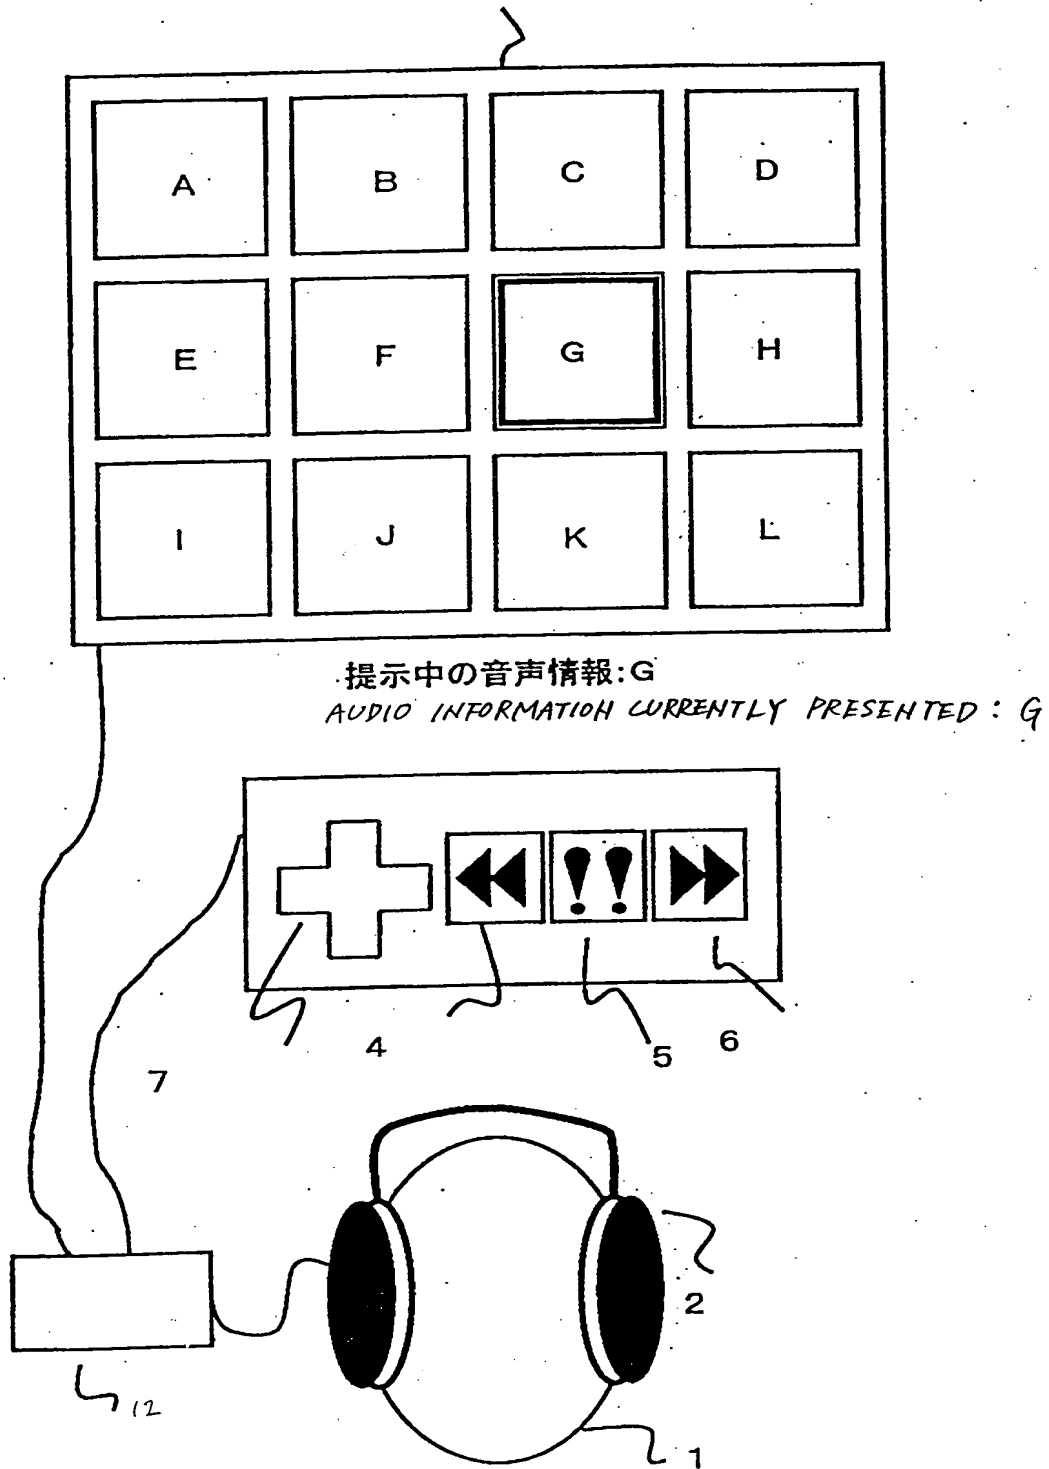 


FIG. 23

400
S

87

 2

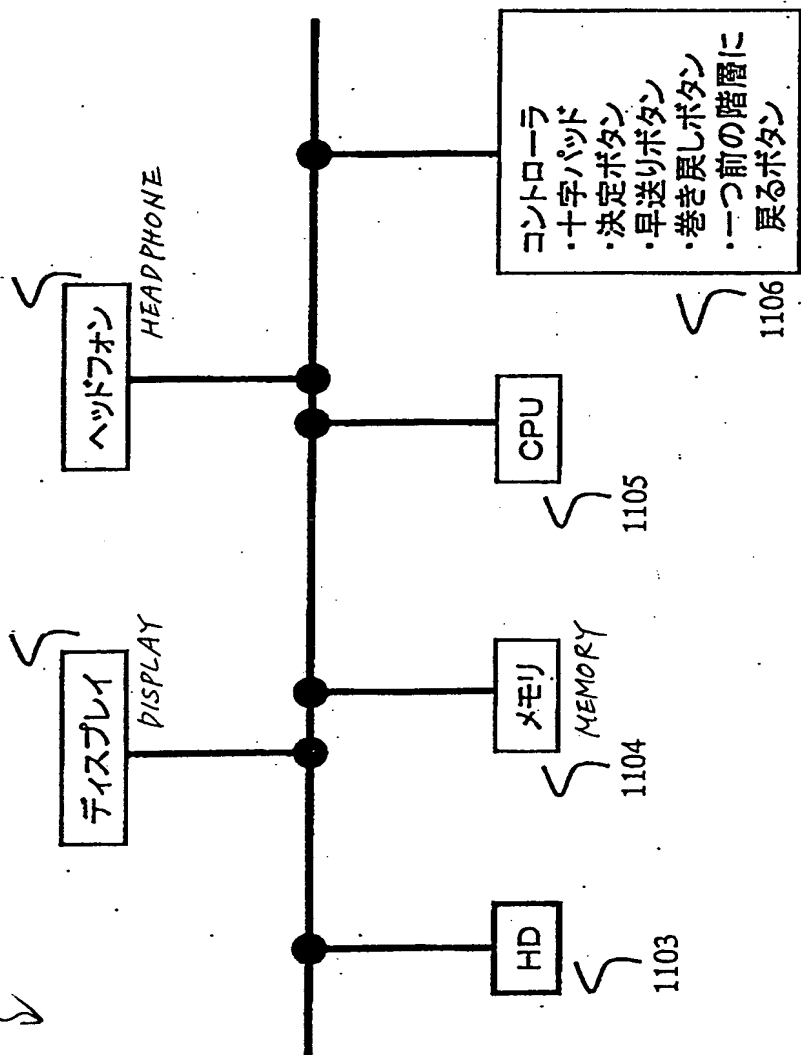

CONTROLLER

• CROSS PAD

• SELECT BUTTON

• FAST-FORWARD BUTTON

• REWIND BUTTON

• BUTTON TO RETURN TO
ONE PREVIOUS HIERARCHY

FIG. 24

NO. 1

